

## 43: Replacement of bevel gear oil, AW42 AWD

V70 (-00), 1999, B5234T8, AW42 AWD, L.H.D, YV1LV62DXX2599726, 599726

2/4/2018




PRINT

## 43: Replacement of bevel gear oil, AW42 AWD

Bevel gear oil,  
replacement

## Drilling holes:

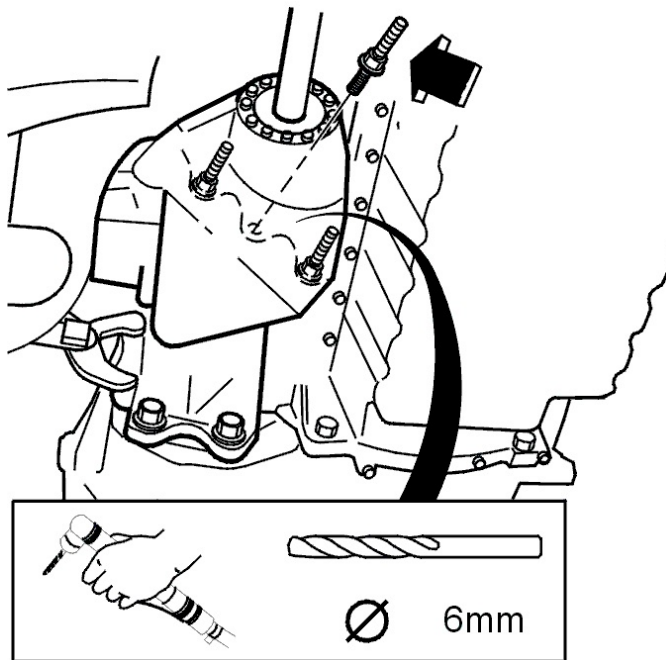

**Caution!** The oil in the bevel gear **MUST** be warm before drained.

**Remove:**

- vibration damper.
- the stud.
- level plug.

**Note!** Place a container under the bevel gear.

**Warning!** Oil will pour out of the drilled hole. Use caution oil **MAY** be varm.

**Drill:**

- a 6 mm (1/4 Inch) diameter hole in the screwhole bottom in the bevel gear.

**Empty:**

- the oil from the bevel gear.

**Installing screw:**

Clean thread with degreaser before installing the bolt.

**Install:**

- thread seal (PN 1161370-0) on the screw
- the stud in its place. Tightening torque 25 Nm (18.5 ft.lbs.).
- vibration damper. Tightening torque 25 Nm (18.5 ft.lbs.).

Add approximately 0.75 liters (25 oz) of oil (P/N. 1161513-5).

**Install:**

- the level plug. Use a new washer (P/N 11998-2). Tightening torque 35 Nm (26 ft.lbs.).

